

ELOK


905, 915, 905W & 915W User Manual



Summary Check List:

1. Crop out done as per template.


2. Arrow on spindle hub points to lever/hinges.



Point arrow to handle


3. Check rubber gasket installed correctly, with lugs pressed in tight, to ensure seal around backplate edge.

4. Ensure sprung spindle pin is seated correctly, securing spindle to spindle hub.



5. Ensure screw casing bolts and through bolts tightened.

6. Ensure power cable wire installed correctly and not bent or crimped in door.

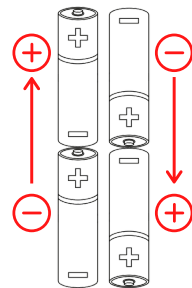

7. Check batteries installed in correct position.

Professionally Installed by: _____

PIN code: _____

Date: ___/___/___

E-LOK 9-Series

Please Note:

- Keep the included mechanical keys in a convenient place such as an Elements Hardware 1236-BLK Key Safe
- Replace the batteries when they have low voltage
 - **Use Alkaline 1.5v Batteries Only**
- Read this User Manual carefully before installing your 9-Series Smart Lock




1236-BLK Shown:

Contents Page

- Pg 5.** 9-Series Body Dimensions
- Pg 6.** Mortice Lock Options
- Pg 7.** 9-Series Packing List
- Pg 8.** 9-Series Specifications
- Pg 9.** Adjusting the Handing
- Pg 10.** Correct Spindle Hub Setup
- Pg 11-12.** Installation

- Pg 13.** Using E-LOK 9-series Smart Lock
- Pg 14.** Set-Up E-LOK App
- Pg 15.** Connect to Wi-Fi for 905W & 915W Model
- Pg 16.** Battery Percentage + Lockset Clock
- Pg 17.** Bluetooth Unlock + PIN Code Management
- Pg 18.** RFID Card Management + Remote
- Pg 19.** Authorized Admin + e-Key Management
- Pg 20.** Passage Mode
- Pg 21.** Admin Passcode + Records
- Pg 22.** Auto Lock + Lock Sound
- Pg 23.** Import From Another Lock + Lock Groups
- Pg 24.** Proximity Touch + Reset Button Control
- Pg 25.** Remote Unlock + Transfer Ownership
- Pg 26.** Factory Reset + Removing E-LOK from App:
- Pg 27.** E-LOK Gateway Info + Setup
- Pg 28.** E-LOK Gateway Setup Continued
- Pg 29.** E-LOK Gateway Reset + Transfer
- Pg 30.** Maintenance Guidelines
- Pg 31.** Important Notes + Contact Us

9-Series Body Dimensions

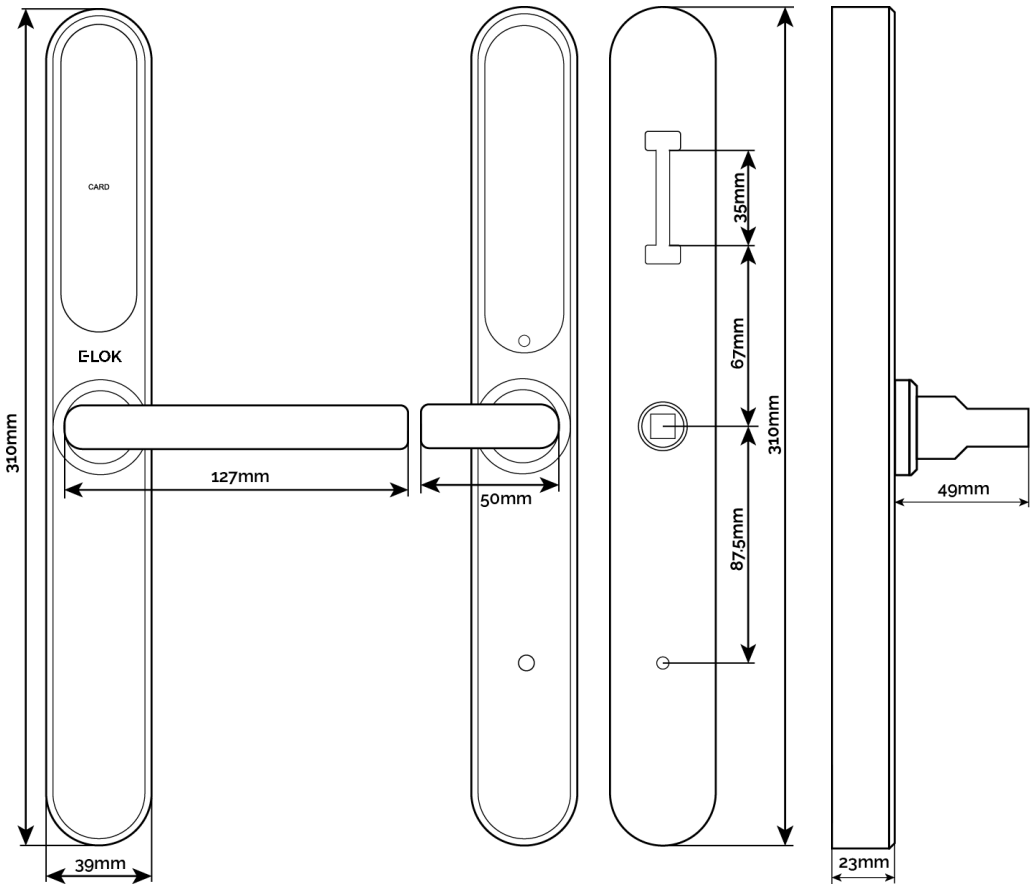

- E-LOK 905 model shown on left with Standard Lever
- E-LOK 915 model shown in mid-left with Snib Lever
- Mounting points shown mid-right
- Body and lever projection shown on right

E-LOK 9-Series

Common Mortise Lock Options

All Mortise templates are available online at E-LOK.com



Back set:



Face Plate:

Case Width:

Back set:




Face Plate:


Case Width:

E-LOCK 9-Series


9-Series Packing List




Front Panel
QTY 1



Back Panel
QTY 1

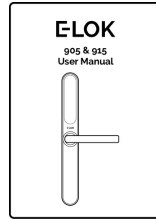

User Manual
QTY 1



Gasket
QTY 2

For door
thickness:
30-50mm



Short Spindle
QTY 1

For door
thickness:
50-70mm




Long Spindle
QTY 1



Screw Casing
QTY 2



Sliding Screw
QTY 2

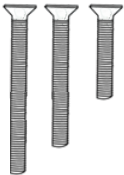

Fixing Screws
QTY 3



Mechanical Key
QTY 2



RFID Card
QTY 3



Mortise Fixing
Screws (Al)
QTY 2

(not included with 905-0 & 915-0)



Mortise lock
QTY 1



Mortise Fixing
Screw (Wood)
QTY 4




Gateway
(Optional)

Specifications

Product Name:	E-LOK 9-Series Smart Lock
Operating Application:	E-LOK App
Manufactured Material:	304 Stainless Steel
Finish Styles:	BLK, SS, GM, SB
Unlock Methods:	PIN Code RFID Card E-LOK App Mechanical Key
Max Num. Locks on App:	Unlimited
Max Num. PIN Codes:	200 PIN Codes
Max Num. RFID Cards:	200 RFID Cards
Batteries:	6V (4 x AA Batteries) - Must be Alkaline
Operating Temp:	-10°C - +50°C
Operating Humidity:	10% - 95%
Suitable Door Thickness:	30mm - 70mm
Suitable Door Types:	Aluminium Door, Wooden Door
Product Size:	310mm(H) x39mm(W) x23mm(D)
Available Mortice lock Sizes:	30, 35, 40, 45, 50, 55, 60, 70mm Back Set & 28, 35mm Sliding Lock
9-Series Residential Warranty:	2 Year Mechanical & Electrical
E-LOK Gateway Warranty:	2 Year
Weather Rating:	Exterior Rated IP 66


Adjusting the Handing

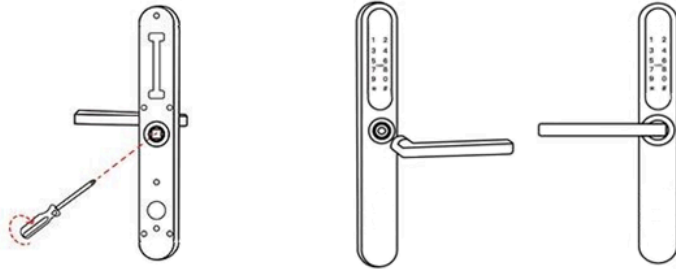

Location of screw shown:


Exterior Panel:

- Loosen inner screw (4mm hex screw)
- Remove handle
- Replace handle in required direction
- Tighten inner screw (use locktite to keep screw tight)
- Repeat with Interior Panel

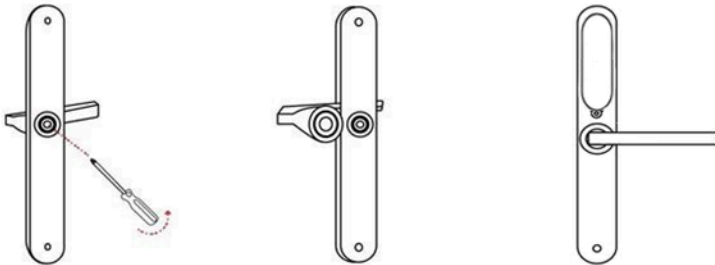


To reverse the Mortice Lock:

- Turn lock upside down
- Push latch into lock case
- Holding latch in lock case, turn 180 degrees
- Release latch to full extended position

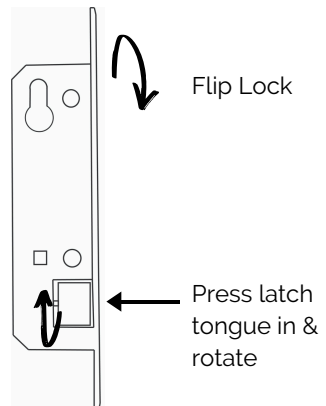

Correct Spindle Hub Setup

The arrow on the spindle hub must point in the direction of the handle (point in direction of hinges)

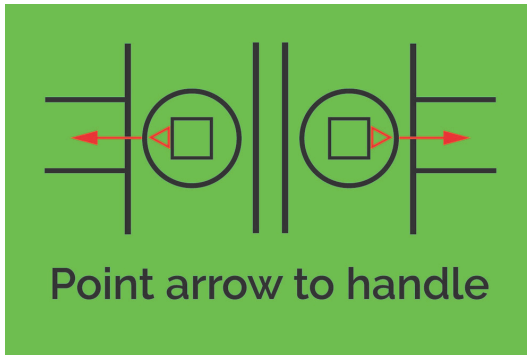

If this step is missed and the arrow is pointing:

Upwards: Whilst outside, the deadbolt won't throw when lever is lifted up.


Opposite: The E-LOK will appear to stay unlocked permanently.

Please check the spindle hub arrow direction and the spindle is locked into place if either of the above is occurring.

Installation


Step 1.

Using the included mortice template, cut holes into door

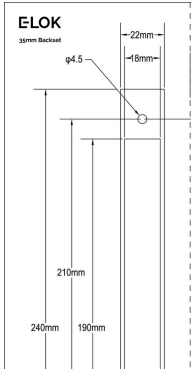


Step 2.

On the door face, drill holes to suit the fixing screws and spindle positions. (Top fixing screw is adjustable please drill to actual position)

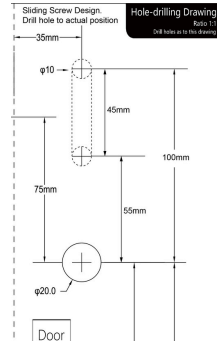


Step 3.

Install the mortice lock into the door. Ensure fixings are tight and straight.

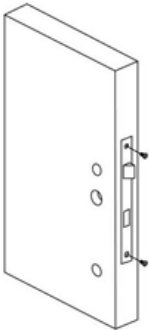

Step 4.


Install the spindle into the exterior handle. Ensuring that the spindle has locked into place and the spindle hub arrow is pointed in the direction of the handle (towards door hinges).

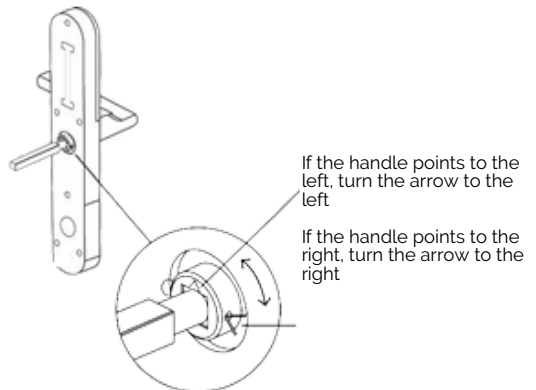

Installation

Step 5.

Fit Sliding Screw to Screw Casing, then install into adjustable screw slot on Exterior handle.
Install bottom Screw Casing to Exterior handle.

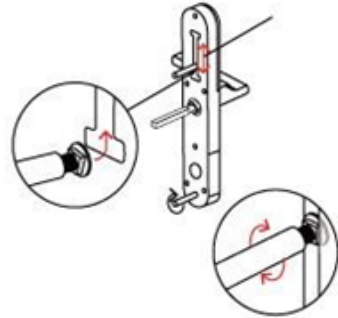


Step 6.

Attach the rubber sealing gaskets to both the Interior and Exterior handles.


Step 7.

Remove the battery cover from Interior handle and connect the cable to interior.

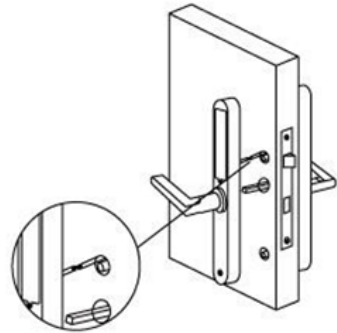

Step 8.

Ensuring there is sufficient room for cable, align Exterior handle with holes drilled and connect the Interior and Exterior handle's cables (a hole may need drilled for cable).

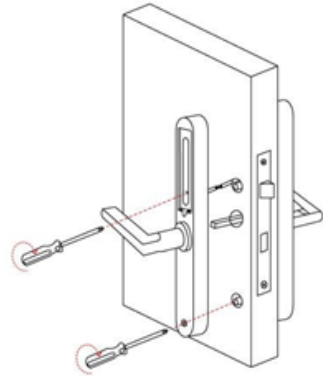


Step 9.

Align Interior handle with spindle and fixing holes. Fix Interior and Exterior handles together using correct sized fixing screws for the door thickness.

Step 10.

Install Batteries into battery case and screw the battery cover back into place.

E-LOK 9-Series Smart Lock is ready to go!

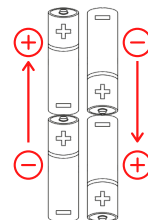

E-LOK 9-Series

Using E-LOK 9-Series Smart Lock

Your E-LOK 9-Series Smart Lock has two handle functions:

Lift up the handle to engage the mortice deadbolt.
Pull down to unlock and release latch and deadbolt.

Important Notes:


When the E-LOK 9-Series automatically locks, the handle disengages from the latch.

Lift the handle to engage the dead bolt (this is not automatic).

The deadbolt will disengage when the door is unlock and the handle is pulled down or the interior handle is pulled down at any time.

Please note that the sliding door model does not lock automatically; lift the handle to engage the locking mechanism.

Using your Pin Code: enter your pin code followed by '#' to unlock your E-LOK. (default pin 123456)

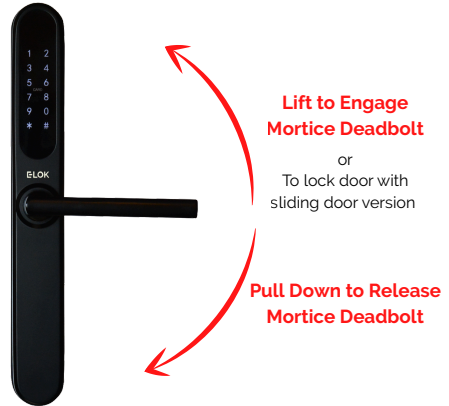

Unlocking E-LOK 9-Series with Mechanical Key

Your E-LOK comes with two mechanical keys to unlock/lock your E-LOK mechanically.


Insert Mechanical Key into slot as shown. Turn key 90 degrees. Pull the handle down as it is now engaged with the latch.

The USB-C port beside it can be used to power up the Smart Lock if the batteries run flat.




Set-Up E-LOK App


Get the E-LOK App

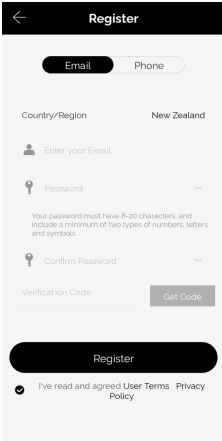


1. Register an account with E-LOK using either phone number or email.

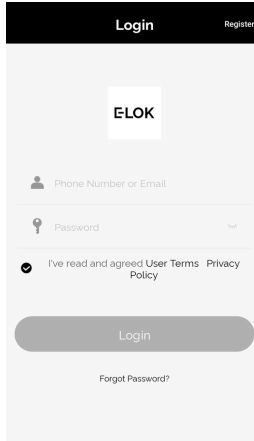


2. Login to your account.

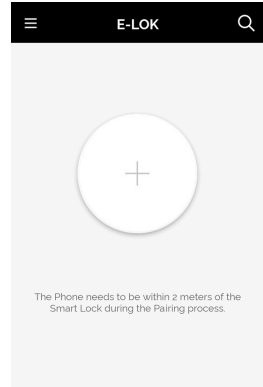


3. Ensure E-LOK smart lock is on and Bluetooth enabled on phone, connect to lock. Tap Keypad & select '+' sign to pair

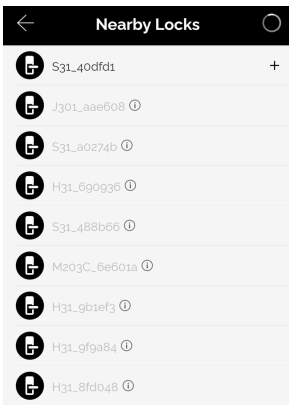

4. Select your E-LOK smart lock. Note it will appear under a serial number which is usually at the top in black.

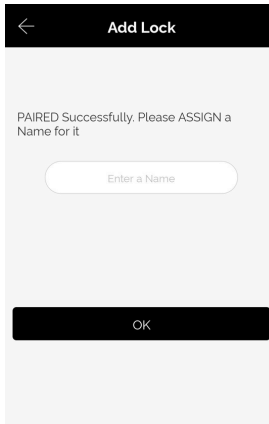

5. Rename your E-LOK smart lock to your preference.

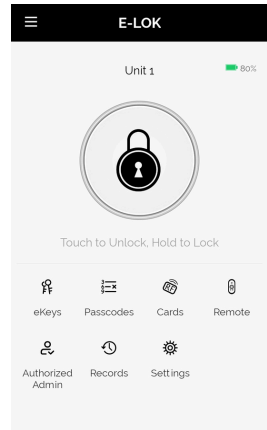

6. View your E-LOK lock management page.

Connect to WiFi (For 905W & 915W only)

There are two ways to connect the lock to your WiFi:

1. When you connect to the lock through the APP, you can choose to connect on the 2.4G WiFi. Follow the steps and enter your WiFi Password.
2. Or go into the lock Settings and follow the below steps
 - o 'WiFi'
 - o Choose your WiFi
 - o Choose the 2.4G
 - o Enter your Wifi Password.

Turn off the "Power Saving Mode":


Keeps Wi-Fi connected at all times, remote unlocking available, and will still send reported messages to the Master Admin. This will also be reported in the 'Records' in the E-LOK App.

Turn on "Power Saving Mode":

The Wi-Fi is connected only when a message is reported. The lock cannot be opened remotely and will only send a reported message to the Master Admin.

How to change to "Power Saving Mode"

- Settings
- Check 'Remote Unlock' is showing on (If Power Saving Mode is turned off)
- Select 'WiFi'
- Select 'Power Saving Mode'
- Choose to select on or off

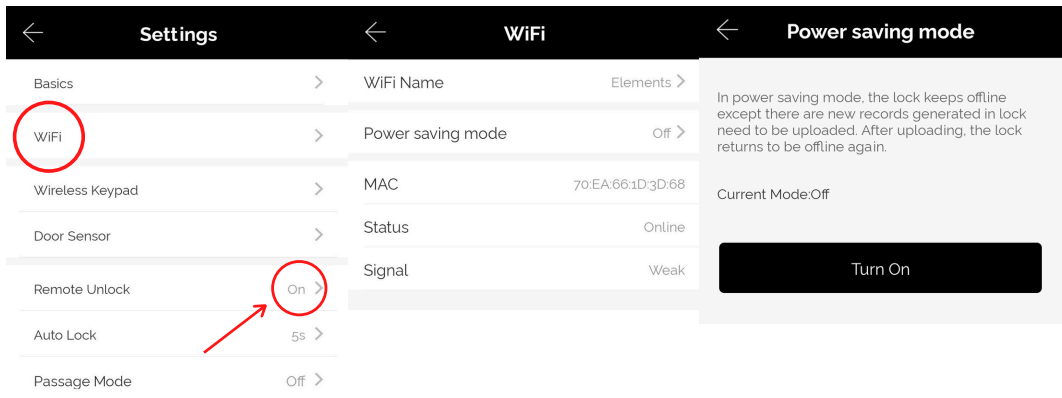


E-LOK 9-Series

Battery Percentage + Lockset Clock


Check Battery Percentage:

E-LOK App allows you to check the battery percentage of your E-LOK in two easy ways. In the lock select page, the app will give you a percentage overview to the nearest 5%. You can also find a more accurate battery level in the settings of the Smart Lock. Select 'Settings', select 'Basics' and then view your battery percentage. **Remember to update this frequently (select 'Battery' and 'Update' while within Bluetooth range).**

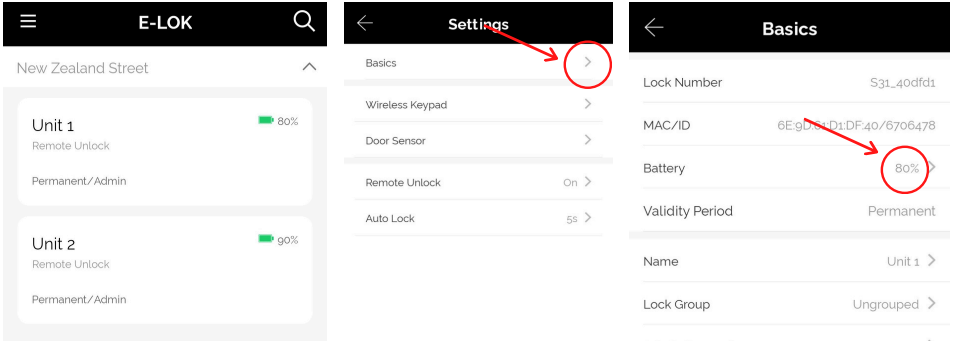

E-LOK Lockset Clock:

Celebrate you E-LOK's Lockset Clock. Select 'Settings' then 'Lock Clock'. Select 'Calibrate Time'. Your E-LOK Smart Lock will communicate with the E-LOK App and set the correct time. This will ensure that operation specifications and unlock records are accurate.

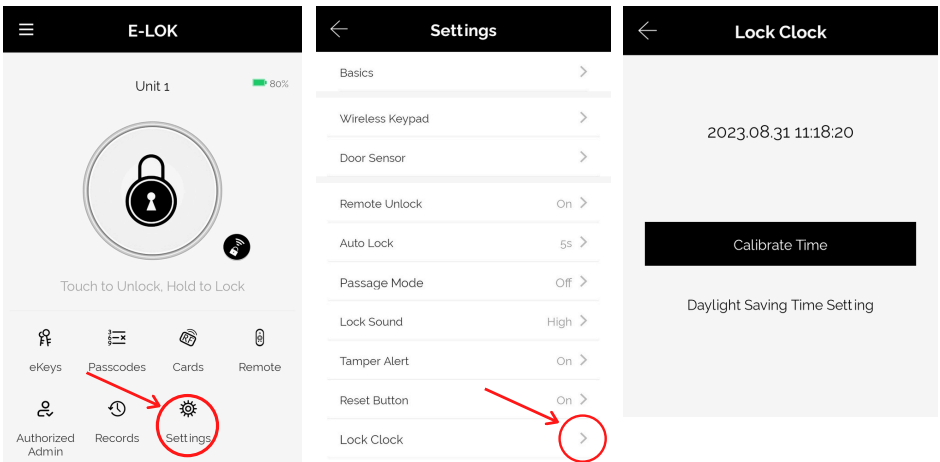

Bluetooth Unlock + PIN Code Management

Bluetooth Unlock:

Once the E-LOK is connected to the App you can Lock and unlock the E-LOCK using the App. Open the lock management page and select the 'lock' icon, this will unlock your Smart Lock via Bluetooth. Hold the 'lock' icon and your smart lock will lock via Bluetooth.




PIN Code Management:

E-LOK App allows you to set 200 unique PIN Codes. You can set a range of different types of PIN Code. We recommend using the 'Custom' setting to create yours. Set it to permanent, name it and set your preferred sequence. (4-9 digits).

Recurring PIN Code allows you to set a PIN Code that only works on certain times and days ex. Saturday and Sunday from 10:00 - 20:00. The app also allows for one-timed and timed PIN Codes. For security reasons codes will time out if not used within a specified period - see the App for more details.

Using your Pin Code: enter your pin code followed by '#' to unlock your E-LOK. E-LOKs have an inbuilt security function which allows for additional numbers to be entered as long as your pin is entered in sequence, ex. pin '1234' entered '5612348'.

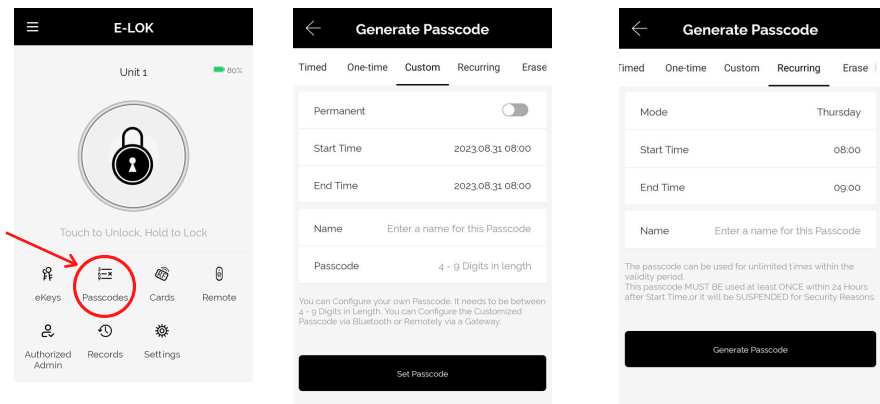


E-LOK 9-Series

RFID Card Management + Remote

RFID Card Management:


E-LOK App allows you to store 200 unique RFID Cards. To set up one of the three FOBs included with your E-LOK 9-Series Smart Lock, select 'Cards' on the lock management page, select 'Add Card'. Choose Timed, Permanent, or Recurring, and name them individually.

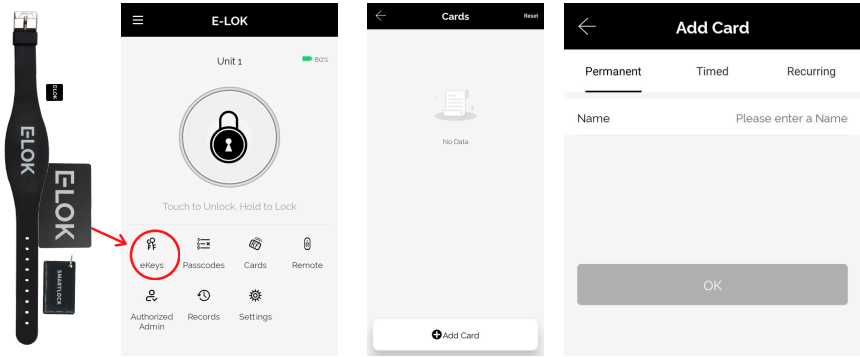

E-LOK Remote:

E-LOK's have a function where you can connect a remote to the lock, so you can unlock and lock it via bluetooth.


First, go to 'Remote', on the E-LOK management page. Next choose permanent, timed, or recurring. Then, select 'add remote'. Follow the instructions on the screen to add the remote to your E-LOK.

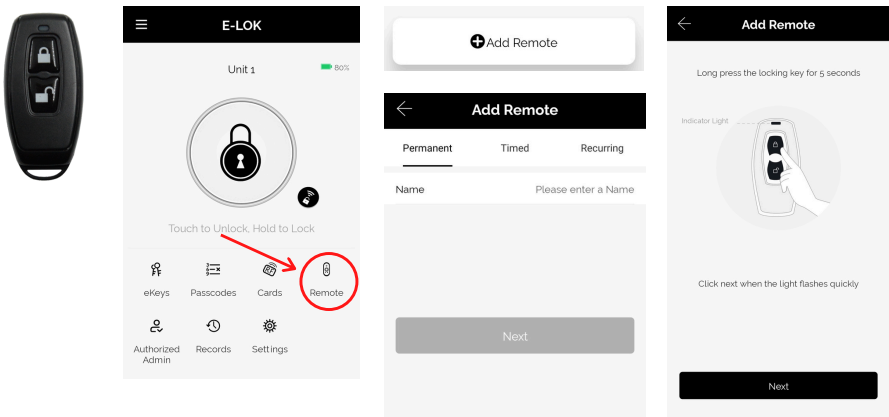

Authorized Admin + e-Key Management

Authorized Admin:


Authorized Admin allows another person with an E-LOK App to access your E-LOK, they can add, change or delete unlock codes set by themselves. Select 'Authorized Admin' in the E-LOK management home page. Then Select 'create admin', **Please note: Send this to the phone number or email associated with the receivers E-LOK App account.**

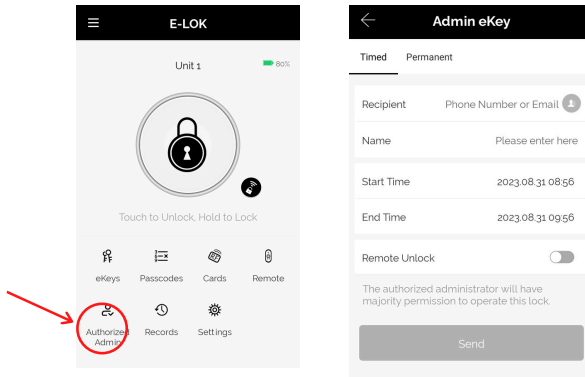

e-Key Management:

An e-Key allows another person with an E-LOK App to unlock/lock your E-LOK 9-Series via the App; e-Keys can be setup as permanent or with parameters. Select the 'eKeys' on the lock management page. Then select 'send eKey'.




Please note: Send this to the phone number or email associated with the receivers E-LOK App account.

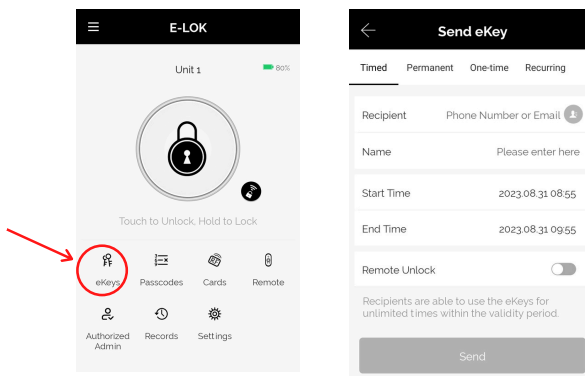

Passage Mode:

Passage Mode:

Set parameters to keep the E-LOK unlocked during specified periods. Select 'Settings', Select 'Passage Mode', Choose the days and hours you wish the E-LOK to be open (ex. Mon - Fri 9:00 - 17:00). From when it is unlock electronically during these hours your E-LOK will say unlocked. The 'Auto Lock' function will lock the E-LOK at the specified time.

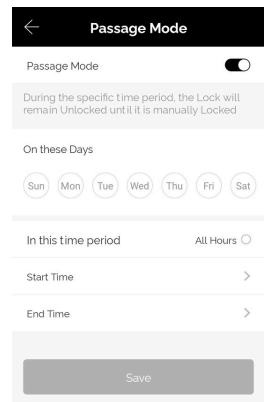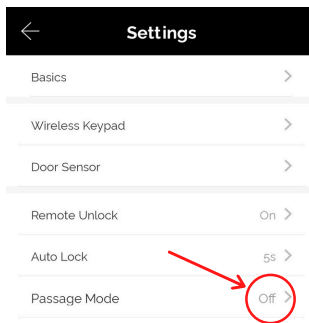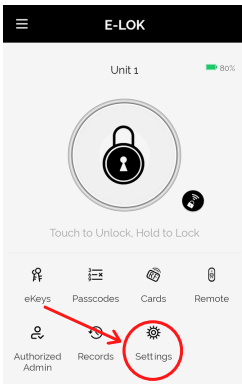


Locking your E-LOK in Passage Mode:

Method 1.

Open up the E-LOK App, long press 'Lock' button on E-LOK app. And lift the handle to engage the deadbolt

Method 2.


Once exited, long press '#' Key on pinpad. And lift handle to engage bolt.

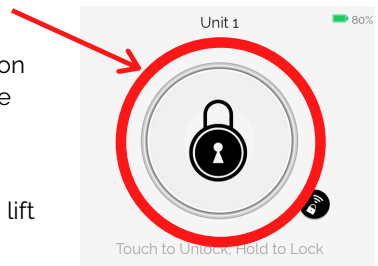

Admin Passcode + Records


Admin Passcode:

E-LOK comes with an admin passcode. To view this select 'Settings' on the lock management page, select 'Basics' and then select 'Admin Passcode'.

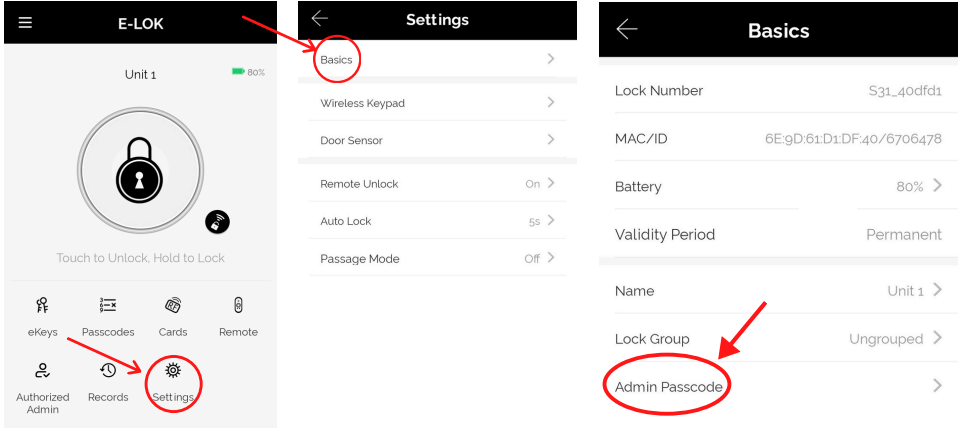

Unlock Records:




E-LOK App records which passcodes were used to unlock and lock the E-LOK and when. You can view these records by going into the 'Records' menu on the lock management page. Only a certain period of records can be retained, you can export these to a spreadsheet to keep historical records and clear or refresh your records to keep things current.

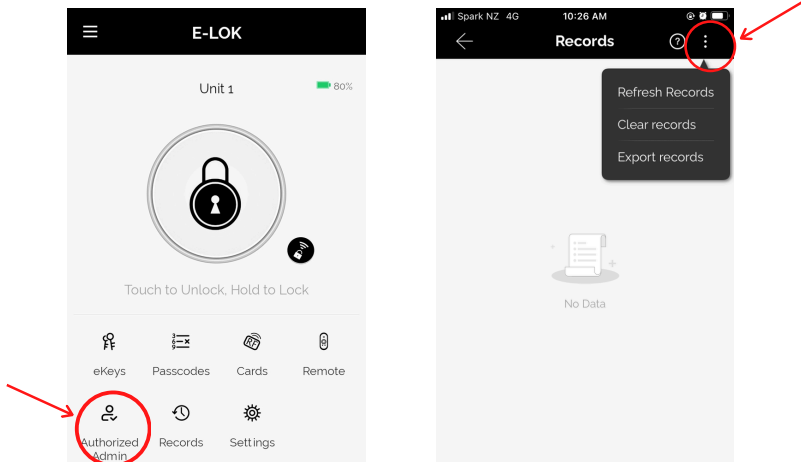

Auto Lock + Lock Sound




Auto Lock:

This function automatically disengages the exterior handle. The E-LOK App allows you to control the auto lock timer on the Smart Lock, you can adjust the time allowed or turn this function off. Select 'Settings'. Select 'Auto Lock'. Adjust setting to suit. **Please note if Auto Lock is off Passage Mode will not lock automatically.**

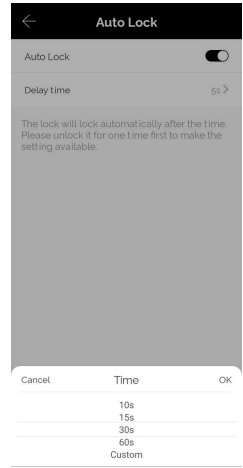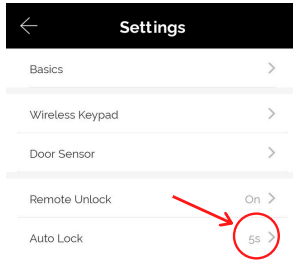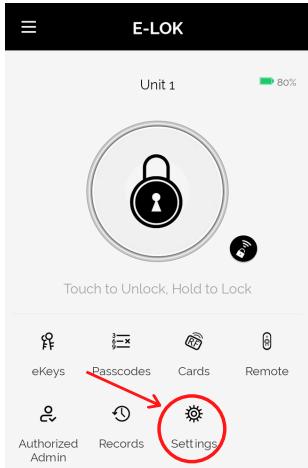

Lock Sound:


The Lock Sound function lets you enable or disable the sound and control the volume. By default Lock Sound is enabled and on high. Select 'Settings'. Select 'Lock Sound'.

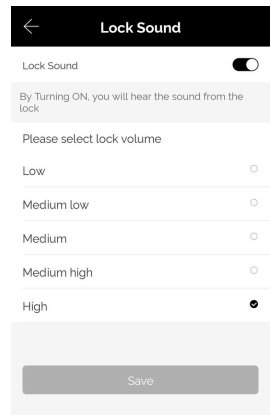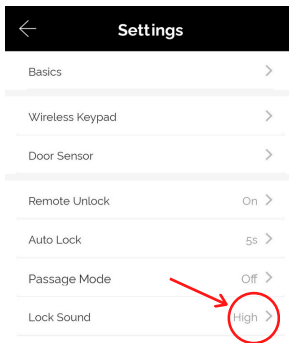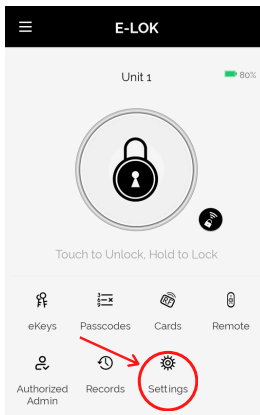

Import From Another Lock + Lock Groups


Import from another E-LOK Smart Lock:

This feature allows you to sync PIN-Codes and RFID Cards between E-LOK Smart locks. Select 'Settings'. Select 'Import from another lock'. Select the lock you would like to import from.

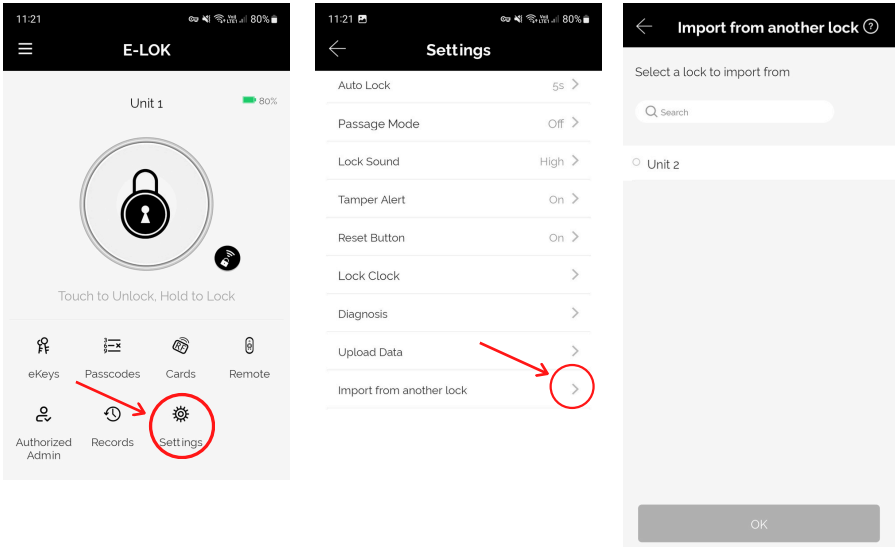

Lock Groups:


You can link E-LOK Smart Locks together in lock groups. First create a lock group in the main settings, then link a Smart Lock to the group in each individual lock settings, select 'Settings' - 'Basics' - 'Lock Group'. View lock groups in the select page. This function allows you to keep the App's home screen tidy by grouping locks from the same site etc.

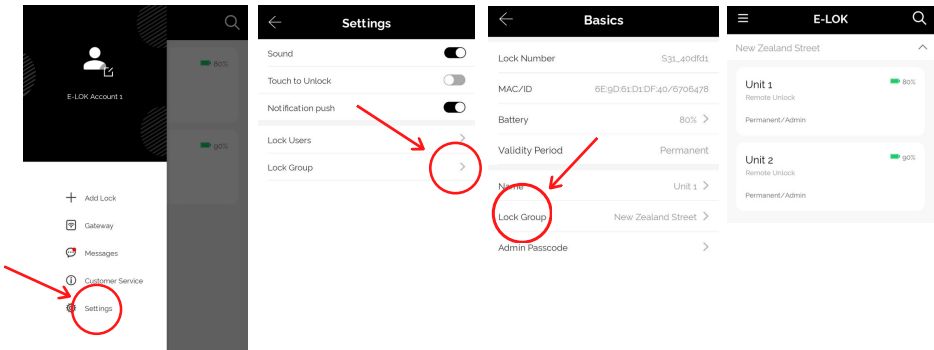

Proximity Touch + Reset Button Control


Proximity Touch to Unlock:

When this feature is enabled it lets you unlock your E-LOK Smart Lock just by pressing any number on the Keypad whilst the app is open. To use this feature, go to the App menu and select 'Settings'. Then enable 'Touch to Unlock'.

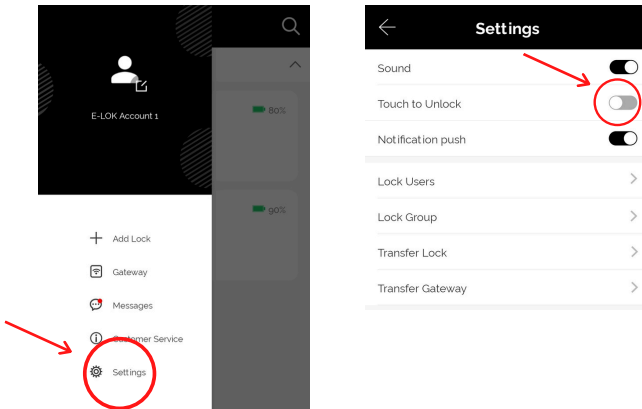

Reset Button Control:


You can disable the Manual Reset button on your E-LOK by deselecting 'Reset Button' in the E-LOK's App settings. Select 'Settings'. Select 'Reset Button'. Adjust setting to preference. This feature works great on E-LOK's installed on Airbnb's, rentals etc. **Please note that while disabled only the E-LOK's 'Master Admin' can factory reset the lock.**

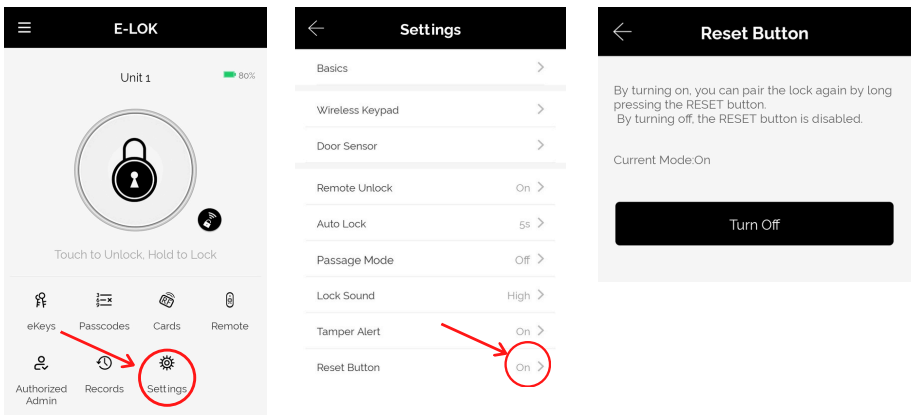

Remote Unlock + Transfer Ownership


Remote Wi-Fi Unlock (only with E-LOK Gateway Add-on or inbuilt Wi-Fi).

After you've connected your phone to your E-LOK Smart Lock and connected your E-LOK Gateway, open the lock management page, select 'Settings', and enable 'Unlock Remotely'. Now select the 'lock' icon, this will unlock your E-LOK via Wi-Fi. If Auto Lock is on in the E-LOK settings, it will lock automatically. Otherwise you can hold down the 'lock' button to lock it remotely.

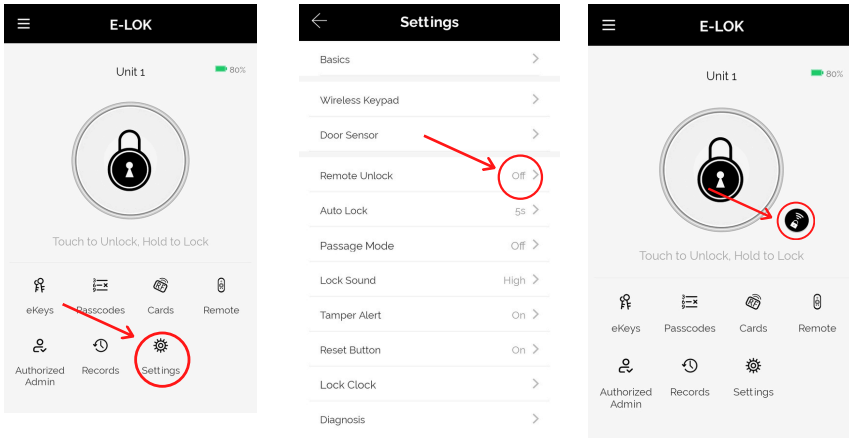

Transfer Lockset Ownership:


This feature allows the 'Master Admin' to be transferred to another E-LOK App account holder, along with all the settings, pins etc. saved to that E-LOK. To Transfer Ownership open App menu, select 'Settings'. select 'Transfer Lock'. Select the lock you want to transfer. Enter the receivers phone number or email (**whichever their E-LOK App account is setup under**) and select 'Next'.

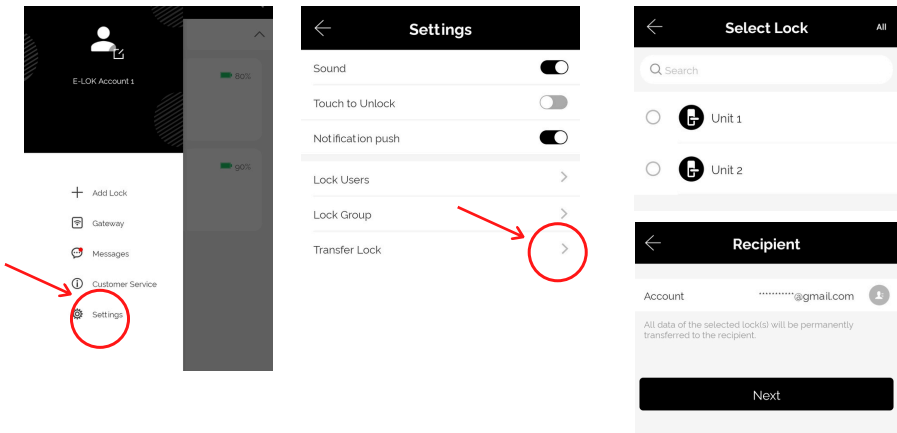

Factory Reset + Removing E-LOK from App

Factory Reset via E-LOK App: (Master Admin only)

In the lock Management Page and within Bluetooth range of the E-LOK, Select 'Settings'. Select 'Delete' and input your E-LOK App password. The E-LOK is now Factory Reset.

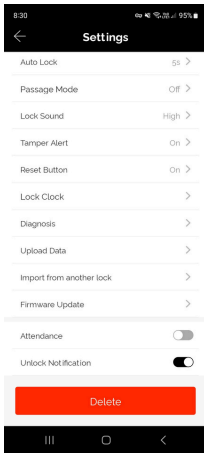

Manual Reset:

Remove battery cover and hold the reset button in the battery case until you hear "Please input initialization passcode". Input code '000#' on the keypad. E-LOK will then state "Deleting administrator successful".


Please Note: if the 'Reset Button' has been deactivated the E-LOK cannot be 'Manual Reset'.

Reset button is located under cable



Removing Manual Reset/Replaced E-LOKs from App:

To remove reset locks from the E-LOK app, go to the app menu, select 'Settings'. Select 'Transfer Lock(s)', select lock. Select 'Next', select 'Remove the Malfunction lock' at the bottom of the page.

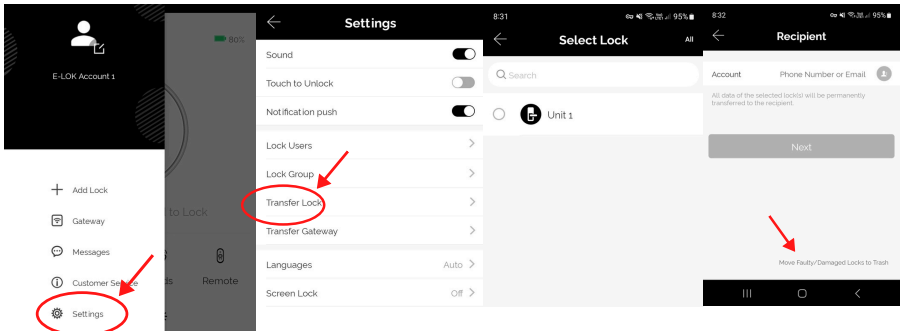

E-LOK Gateway Info + Setup

(Optional Add-On)

The E-LOK Gateway connects your E-LOK to Wi-Fi via Bluetooth, allowing the transfer of information and commands to your E-LOK via Wi-Fi.

Please note: only the **'Master Admin'** can set-up an E-LOK Gateway to a Smart Lock.

E-LOK Gateway should be plugged in via the included USB-C cable.

It must be:

- Near a Wi-Fi router
- Near the E-LOK 9-Series

(Around 5-10 meters from each or as close as possible).

If the E-LOK Gateway is not near one or both, connection may be poor and the E-LOK Gateway may not function as expected.

Gateway Specs:

Network: 2.4 GHz


IEEE Standard: 802.11b/g/n

Power Interface: Type-C USB

Power Input: DC5V/500mA

Gateway Setup:

Open the App menu, select 'Gateway'. Select '+' Sign. Select Gateway type ex. G2 (Wi-Fi).

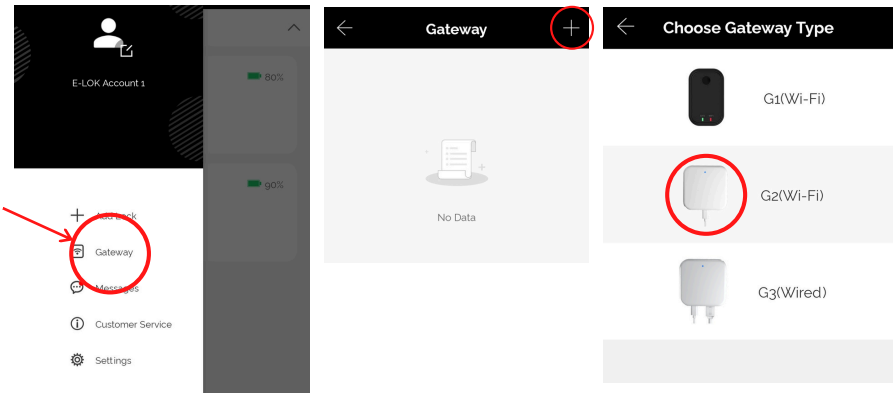


E-LOK Gateway Setup Continued (Optional Add-On)

Sync Gateway to E-LOK App:

Plug in the E-LOK Gateway. The light should flash red and blue - ready to connect.

Select 'Next' then Select the gateway you want to add (at the top in bold). Configure your network (2.4GHz only). Select the Wi-Fi network and input Wi-Fi password. Name the E-LOK Gateway.

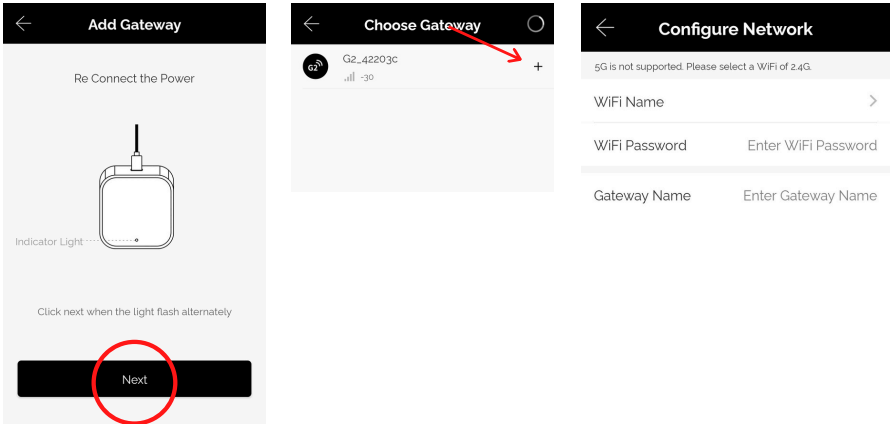

Connect E-LOK to Gateway:

The E-LOK Gateway will now scan for an E-LOK's to connect to. You can have multiple E-LOK's connected to one E-LOK Gateway. To connect an E-LOK go to the App menu, select 'Gateway', select the gateway you want to connect to. Select the lock(s) you would like to connect to.




If the E-LOK Gateway refuses to connect or displays an error messages; disconnect it from the power source for at least 15 minutes. Then retry setting it up.

E-LOK Gateway Reset + Transfer

(Optional Add-On)


Reset E-LOK Gateway:

Go to the E-LOK App menu, select 'Gateway'. Select the Gateway you would like to factory Reset and select 'Delete'. This will un-sync the Smart Locks that are connected to it. The Smart Locks will work as usual via Bluetooth.

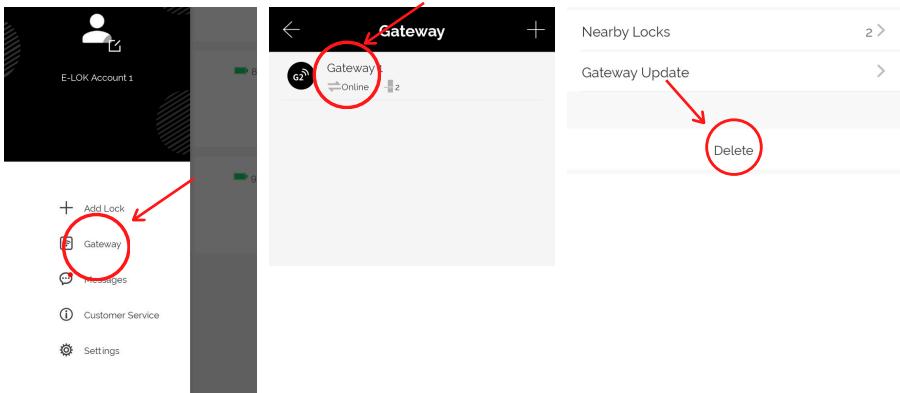

Transfer E-LOK Gateway:

Go to the E-LOK App menu, select 'Settings'. Select 'Transfer Gateway' and select the gateway you would like to transfer. Enter the receiver's phone number or email (whichever their E-LOK App account is setup under) and select 'Next'.

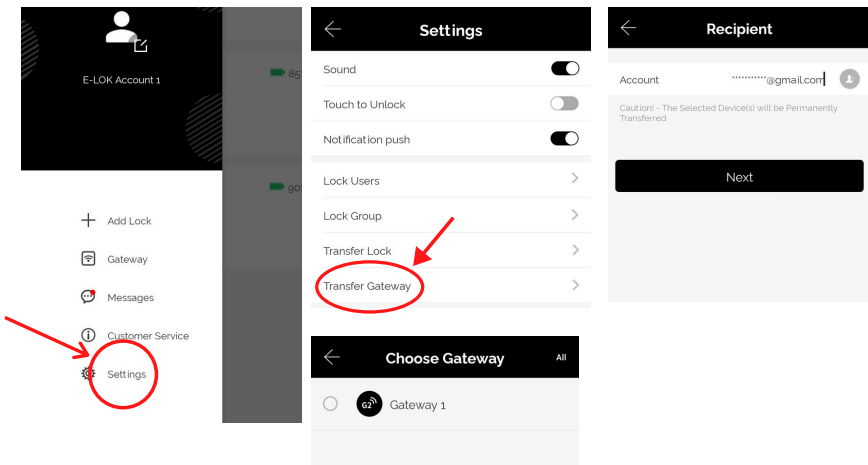


E-LOK Maintenance Guidelines

Maintenance should be carried out on your E-LOK 9-Series every 6 months.

Use the below guide to ensure your lock set lasts the test of time:

Every 6 months:

- Check that the screws fixing the mortice lock are tight. Check that the screws fixing the rear panel to the front panel are tight.
- Check if batteries need replacing. If battery percentage is low replace with four fresh Alkaline 1.5V AA batteries. Diagram shown below:

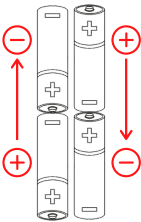

- Wipe the surface of the E-LOK 9-Series Smart Lock with a cloth dampened with only water. This will help remove any dust or micro contaminants from the surface.
- If the handle feels loose or wiggles from the Smart Lock, you may have to remove the Smart Lock from the door and re-tighten the inner screw with Loctite securing the handle to either or both the front and rear panel.
- It is also a good idea to do a full factory reset of the E-LOK 9-Series Smart Lock to ensure software stays light and un-bloated.

Important Notes + Contact Us

Important Notes:

E-LOK's have very limited features until an administrator (Master Admin) is setup using the E-LOK App.

To download the App scan the QR code below:



- Default Code: (123456#)
- Initialization Code: (000#)
- Lock E-LOK (Hold #) or (Hold App Lock button)

The E-LOK App works with the complete range of E-LOK smart locks and Gateways.

The E-LOK App allows you to manage multiple E-LOKs smart locks and Gateways, name your E-LOKs and Gateways during setup to prevent mix ups.

The E-LOK Gateway can connect to multiple E-LOK smart locks within range (5-10m).

Remove all protective coverings after installation to prevent plastic deterioration causing surface damage.

Contact us by visiting e-lok.com



or find our contact details on the E-LOK App 'Customer Service' page.

E-LOK

9 - Series

User Manual

Scan to download the E-LOK App



E-LOK.com

