# **E-LOK**

## 1005 User Manual



## **Summary Check List:**

For further details see pages 8-12
1. Crop out done as per template.
2. Arrow on spindle hub points down.  Point clutch arrow down; Change handing, release screw beside clutch + turn lever.
3. Check rubber gasket installed correctly with lugs pressed in tight. So proper seal around backplate edge is created.
4. Ensure sprung spindle pin is seated correctly, securing spindle to spindle hub.
5. Ensure screw casing bolts and through bolts tightened.
6. Ensure power cable wire installed correctly and not bent or crimped in door.
7. Check batteries installed in correct position.
Professionally Installed by:
PIN-Code: Date: / /

## **Please Note:**

- Keep the included mechanical keys in a convenient place such as an Elements Hardware 1236 Key Safe.
- Replace the batteries when they have low voltage.
- Read this User Manual carefully before installing your 10-Series Smart Lock
- Use Alkaline 1.5v Batteries Only




1236-BLK Shown:

## **ELOK 10-Series**

## **Contents Page:**

- Pg 5. 10-Series Body Dimensions
- **Pg 6.** Mortice Lock Options
- Pg 7. 10-Series Packing List
- Pg 8. 10-Series Specifications
- **Pg 9.** Adjusting the Handing
- Pg 10. Clutch Arrow on Spindle Hub
- Pg 11. Installation: Steps 1-4
- Pg 12. Installation: Steps 5-7
- **Pg 13.** Factory Reset: If you're admin
- **Pg 14.** Factory Reset: other methods
- **Pg 15**. First Set-Up
- Pg 16. Bluetooth Unlock + PIN Code Management
- Pg 17. Lock & Unlock Button
- Pg 18. RFID Card Management + Vague Code + Privacy Lock
- Pg 20. Remote Unlock + e-Key Management
- **Pg 21.** Admin Passcode + Unlock Records
- **Pg 22.** Battery Percentage + Lockset Clock
- Pg 23. Passage Mode
- Pg 24. Passage Mode + Remote
- **Pg 25.** Extra lock settings 1
- Pg 26. Extra lock settings 2
- **Pg 27.** Transferring Ownership
- Pg 28. 10-Series Handle Functions
- **Pg 29.** Unlock with Mechanical Key
- Pg 30. E-LOK Gateway Pg. 1
- **Pg 31.** E-LOK Gateway Pg. 2
- Pg 32. E-LOK Gateway Pg. 3
- Pg 33. E-LOK Gateway additional notes
- Pg 34. Maintenance Guide
- Pg 35. Important Notes + Contact


## **10-Series Body Dimensions:**

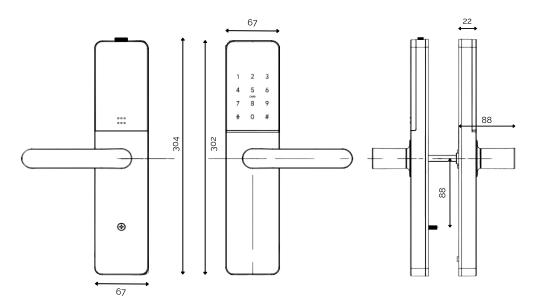

- Left, E-LOK 1005 body dimensions.
- Right, side view body and lever projection


## **ELOK 10-Series**

# **Common Mortice Lock Options:** All Mortice templates are available online at E-LOK.com

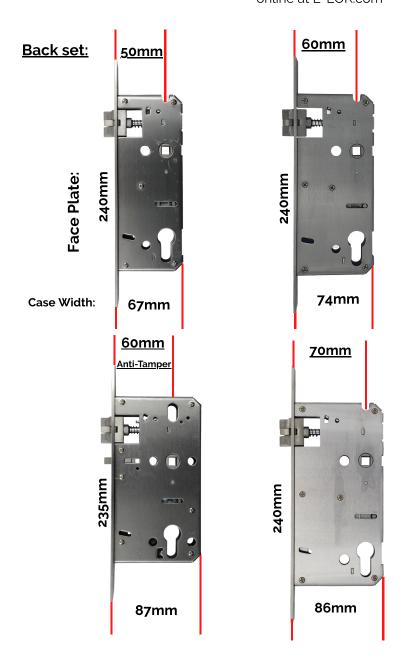

## **ELOK 10-Series**

## 10-Series Packing List:

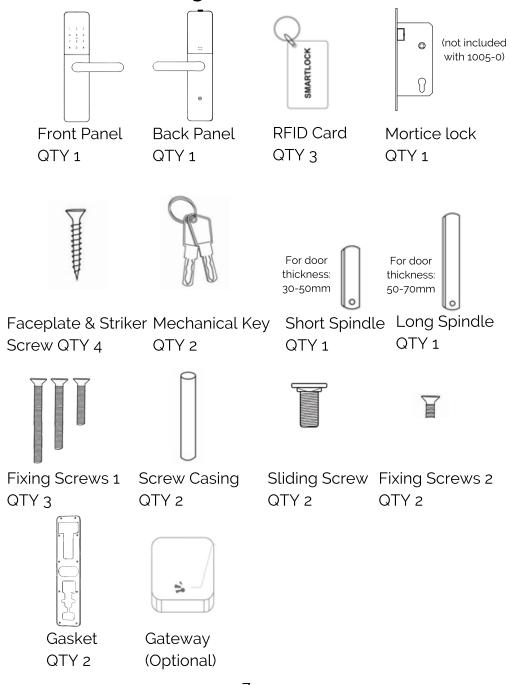

## **Specifications:**

**Product Name:** E-LOK 10-Series Smart Lock

**Operating Application:** E-LOK App **Finish:** Black, or Silver.

Unlock Methods: Interior Button

PIN Code RFID Card E-LOK App

Mechanical Key

Max Num. Locks on App: Unlimited

Max Num. PIN Codes:150 PIN CodesMax Num. RFID Cards:200 RFID Cards

**Batteries:** 6V (4 x AA Batteries) - Must be Alkaline

Operating Temp: − 20°C - 70°C

**Operating Humidity:** 0% - 95%

Suitable Door Thickness: 30mm - 70mm

Suitable Door Types:Aluminium Door, Wooden DoorProduct Size (Body only):302mm(H) x67mm(W) x22mm(D)Product Size (Including Lever):302mm(H) x158mm(W) x88mm(D)Available Mortice lock Sizes:50mm, 55mm, 60mm, 60mm Anti-

Tamper, 70mm, and 60/70mm

Adjustable Latch.

10-Series Residential Warranty: 2 Year Mechanical and Electrical

E-LOK Gateway Warranty: 2 Year

**Weather Rating:** Exterior Rated IP 55


## **Adjusting The Handing:**

## Steps to change the handing on E-LOK 10-Series:

- Locate handing screw as shown on right:
- Un-do and remove handing screw.
- Rotate entire lever 180 degrees into opposite position.
- Re-install handing screw in opposite position.
- Test lever action, ensure both handing screw and hex lever screw is tight.


Complete this same process for the second E-LOK 10-Series panel.

Ensure handing screw is tight before moving on.

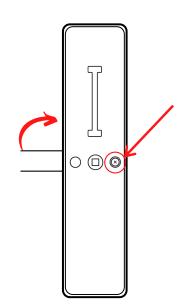

#### To reverse the Mortice Lock:

- Turn lock upside down
- Push latch into lock case
- Holding latch in lock case, rotate 180 degrees
- Release latch to full extended position.

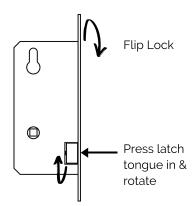

## Arrow on Spindle Hub & Sprung Pin Spindle

The arrow on the spindle hub must be installed pointing down for the E-LOK 10-Series Smart Lock to work as designed.



#### If this step is missed and the arrow is pointing:

**Horizontal:** Whilst outside, the deadbolt won't throw when lever is lifted up.

**Upwards:** The E-LOK will appear to stay unlocked permanently.

If you are experiencing these symptoms please ensure the arrow alignment is correct + sprung pin is installed.

If your E-LOK was working fine for 4-12 weeks and now won't open from the outside, the sprung pin may have not been installed correctly, or has unseated from the spindle hub.

Open door from inside, lift the inside handle up, check if deadbolt has thrown. Holding the outside handle, lift the outside handle up, check if deadbolt has thrown. If the deadbolt throws with the inside handle and not the outside handle, the Sprung Spindle pin is likely not seated correctly.

## Installation:

#### Step 1.

If you are retrofitting into an existing mortice hole, this step may not be required. If you are fitting the 10-Series into a new hole, take the included mortice template and cut the holes into your door. Your E-LOK 10-Series comes with screws to suit both wooden and aluminium doors.

#### Step 2.


On the door face, you'll be required to make holes to suit the top screw, spindle and bottom screw of the E-LOK Smart Lock. Note the top fixing screw is adjustable. Please cut to actual screw position.


#### Step 3.


Install the mortice lock into the doc Ensure fixings are tight and straight

#### Step 4.

Install the spindle into the outdoor handle. Ensure that before you install, check the arrow on the spindle hub is pointing down. Use the Sprung Pin on Spindle, to secure spindle in place.

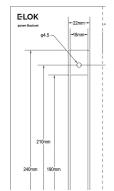

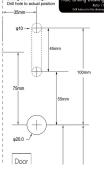


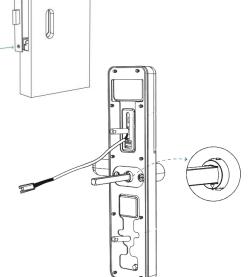

## Installation:

#### Step 5.


Now install the adjustable height screw into the screw casing, then screw into the adjustable screw slot. Now install bottom screw casing onto screw. Now attach the included rubber gaskets to both the front and back handle.

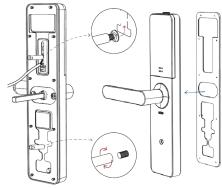

#### Step 6.

Now you are ready to connect the front and back panel. First, place the front panel onto the door and feed the spindle, and the cable, through the door in their respective fixing holes. You may need to create a cavity in a wooden door for the cable.

Slide the battery cover off the back panel. Connect the cable, ensure there is space in the door for it.

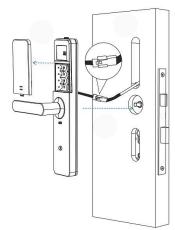


#### Step 7.

Screw the back panel to front.

Depending on your door width, use the appropriate included fixings screws for the top and bottom fixing points.

Install 1.5v AA Alkaline Batteries into battery case and slide the battery cover back into place.

E-LOK 10-Series Smart Lock will be ready to go!

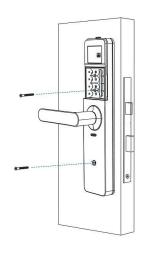

## Factory Reset: (if you are admin and in Bluetooth range)


#### **Normal Factory Reset:**

You must be admin and in Bluetooth range of the Smart Lock in order to complete factory reset.

You can factory reset your E-LOK by going into the lock settings and tapping "Delete".

This will fully factory reset the E-LOK Smart Lock.

From here, you can set the E-LOK Smart Lock back up to your phone.

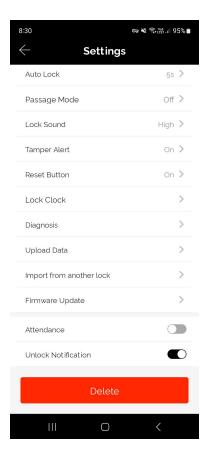

## **Manual Factory Reset**

#### Manual reset:

If you are not admin of the E-LOK Smart Lock, or you wish to perform a manual factory reset, remove the battery cover and complete:

Long press the reset button in the battery case until you hear "Please input initialization passcode", then release the button and input code "000#" on the keypad.


The system reset will be complete. From here you can link the E-LOK Smart Lock to your phone via the E-LOK App.

**Please Note**: The default code before connecting to the E-LOK, is **123456#**.



### Trouble shooting:

If you manual reset whilst you were admin of the E-LOK, transferring Lockset to Trash will complete the reset of the E-LOK:

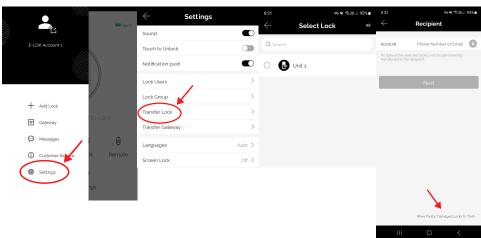


## First Set-Up:

Get the E-LOK App by visiting E-LOK.com for the app download link




 Register an account with E-LOK using either phone number or email.

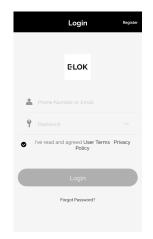


2. Login to your account.



3. Ensure E-LOK 10-Series is on and Bluetooth enabled on phone, connect to lock. Tap Keypad & + sign to pair

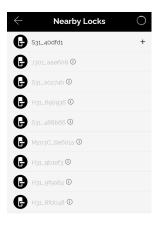

4. Select your E-LOK 10-Series. Note it will not be called the model of your E-LOK Smart Lock. It is usually the one at the very top in a black font.

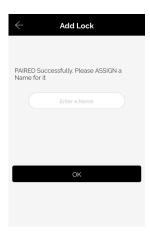

5. Rename your E-LOK 10-Series to your preference.



6. View your E-LOK lock management page.

## Bluetooth Unlock + PIN Code Management

#### **Bluetooth Unlock:**

After you've connected your phone to your E-LOK Smart Lock, open the lock management page and tap the "Unlock" icon. This will unlock your Smart Lock via Bluetooth and it will automatically re-lock itself according to the set auto lock timer.





#### **PIN Code Management:**


E-LOK App allows you to set 200 unique PIN Codes. You can set a range of different types of PIN Code. The best is to choose 'Custom' to create yours. Set it to permanent, name it and set your preferred sequence. (4-9 digits).

Recurring PIN Code allows you to set a PIN Code that only works on certain times and days. Either set the PIN Code to work one day a week, daily, weekdays or weekends -during set hours. The app also allows for one-timed and timed PIN Codes.

Using your Pin Code: enter your pin code followed by "#" to unlock your E-LOK.

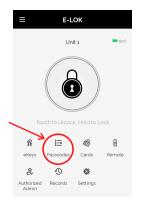

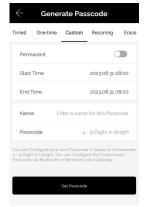

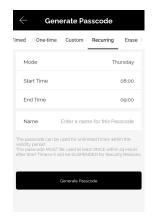

## **Lock & Unlock Button**

The E-LOK 10-Series comes with a convenient new feature: a lock and unlock button located on the interior panel of the lock. This button allows for easy control over the lock's state, providing an additional way to secure or access your home.

To use this feature, simply press the button once. If the door is unlocked, using the button will lock the door, and visa versa. A helpful indication light will shine green or red upon clicking the button. providing confirmation as to whether the door is locked or unlocked. (green means the door is unlocked, and red means it's locked). If your lock sound is on, you will also hear the E-LOK say "locked", or "unlocked".



This feature provides a quick and straightforward way to control the lock's state from the inside, adding to the overall convenience and flexibility of your E-LOK 10-Series smart lock.

#### **Using Auto Lock with Button:**

After setting up your E-LOK 10-Series, Auto Lock will automatically be enabled and set to 5 seconds. You can continue to use the Lock/Unlock button with Auto Lock enabled, bearing in mind that if you click the button to unlock the door, it will lock automatically after the set Auto Lock timer has run out (5 seconds default).


Another way to use the button, is to turn Auto Lock off completely. With Auto Lock off, locking and unlocking becomes fully manual. For example, if you click the button to unlock the door, it will stay unlocked until you lock it again by clicking the button once more, holding down the hash key, or locking it via your app.

This is a preference thing, but either way it's important to note the functionality of the button with Auto Lock on, and with Auto Lock off.


## **RFID Card Management + Vague Code**

#### **RFID Card Management:**

E-LOK App allows you to store 200 unique RFID Cards. To set up one of the three included with your E-LOK 10-Series Smart Lock, tap "Cards" on the lock management page, tap Add Card. Choose Timed, Permanent, or Recurring, and name them individually and add them to your key-ring for easy usability.

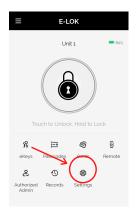



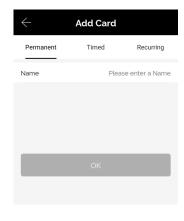


#### E-LOK Vague Code:


E-LOK's allow you to enter a scramble code, or vague code, of up to 16 digits. For example, if the PIN-Code was 3579, 9287**3579**1122 could be entered and the E-LOK would unlock. The reason this works, is because it still includes the actual PIN-Code somewhere in the sequence. Use this if you want to make it harder for any prying eyes to figure out your PIN-Code!


## Remote Unlock + e-Key Management

#### Remote Wi-Fi Unlock (only with E-LOK Gateway Add-on)

After you've connected your phone to your E-LOK Smart Lock and connected your E-LOK Gateway, open the lock management page and ensure Remote Unlock is enabled in the settings. Now tap the Unlock icon. This will unlock your E-LOK via Wi-Fi. If Auto Lock is on in the E-LOK settings, it will lock automatically. Otherwise you can hold down the lock button to lock it remotely.

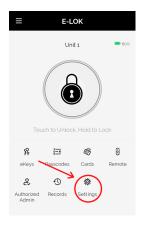


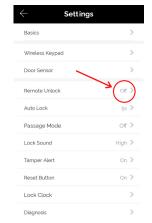

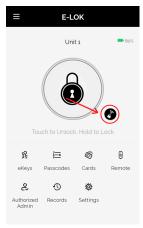


#### e-Key Management:

An e-Key gives another person with an E-LOK App Account access to view and use your E-LOK 10-Series. Tap on the "eKeys" icon on the lock management page. This allows you to send an electronic key to another person with an E-LOK App account. You can either set the account to be an Admin or a User. If you want them to be an Authorized Admin, click "Authorized Admin" in the E-LOK management home page. Then click "create admin", or, if it is a user eKey, click "send eKey".

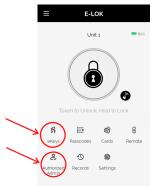




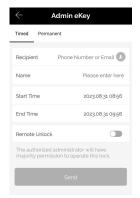

## Admin Passcode + Unlock Records


#### **Admin Passcode:**

E-LOK comes with an admin passcode. To view this tap "Settings" on the lock management page, tap "Basics" and then tap "Admin Passcode".

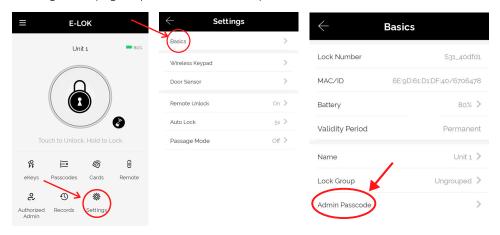

#### **Unlock Records:**


E-LOK App records which passcodes were used to unlock the E-LOK and when. You can view these records by going into the "Records" menu on the lock management page. In the example you can see the name of the unlock code, eg "John", what time it was used and what type of unlock code was used. With App versions 1.2 and above, you can view failed unlock attempts and see which code was used.

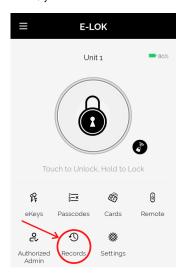

## **Battery Percentage + Lockset Clock:**


#### **Check Battery Percentage:**

E-LOK App allows you to check the battery percentage of your E-LOK in two easy ways. In the lock select page, the app will give you a percentage overview to the nearest 5%. You can also find a more accurate battery level in the settings of the Smart Lock. Tap into "Settings", then "Basics" and then view your battery percentage.

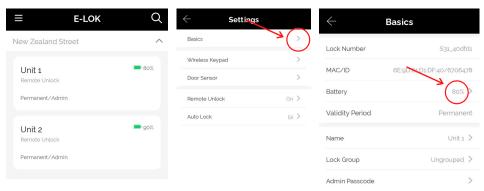

#### E-LOK Lockset Clock:


For the unlock records to be synced correctly, the Lockset clock needs to be calibrated. To do this, Tap into "Settings" then "Lock Clock". Here tap "Calibrate Time". Your E-LOK Smart Lock will communicate with the E-LOK App and set the correct time. This will ensure the operation/unlock records are accurate.

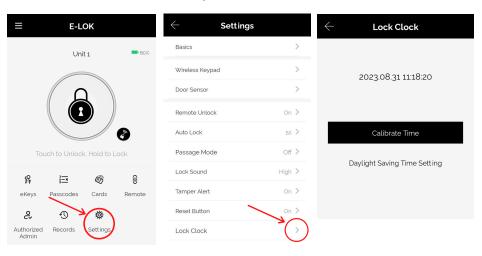

## Passage Mode:

#### Passage Mode:

E-LOK App allows you to manage and control passage mode on your E-LOK 10-Series Smart Lock. Tap into "Settings", "Passage Mode", then choose the days and hours you want your E-LOK Smart Lock to be in passage mode. A common application for this is having a Smart Lock on passage mode Mon-Fri gam-5pm for an office building. As a security feature, passage mode only begins after an unlock method (pincode, RFID Card etc) has been used on the smart lock.

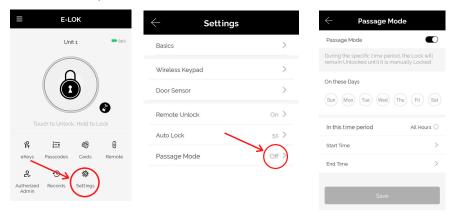

When you leave your house or office with passage mode set on, or you want to disable passage mode at any given time, there are three main methods to do so.

Long press "#" Key on pin-pad. This will lock the E-LOK Smart Lock until you unlock it again. This method and the next, are perfect as they don't require the use of a phone.

The next option to remove the lock from passage mode, is using the button on the interior of the lock to lock the door. You should hear the door say locked, and the button should turn red. This method is great if you want to lock it during the passage mode period, without having to go outside.

Open up the E-LOK App, long press "Lock" button on E-LOK app. This will Lock your Smart Lock until you unlock it again.



## Passage Mode + Remote

#### Manual Passage Mode:

E-LOK's can be put into passage mode manually also, directly from the keypad with no app intervention needed. Simply input your code and click unlock, and before it auto locks again, input "123#", the lock should now be set to passage mode.

To take it out of passage mode and lock it again, simply choose one of your locking methods to do so. Clicking the lock/unlock button or holding down the # key are the preferred options.

#### E-LOK Remote:

E-LOK's have a function where you can connect a remote to the lock, so you can unlock and lock it via bluetooth.

First, go to Remote, on the E-LOK management page. Next choose permanent, timed, or recurring. Then, click add remote. Follow the instructions on the screen to add the remote to your E-LOK.









## **Extra Smart Lock Settings:**

#### Auto Lock:

E-LOK App allows you to adjust the auto lock timer on the Smart Lock. This is the timer that is triggered once the Smart Lock has been unlocked using any unlock method unless passage mode is enabled. Auto lock timer is under the lock settings tab.

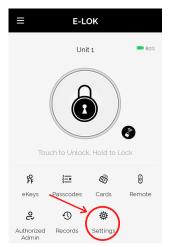


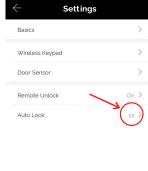





#### Lock Sound:

Lock Sound setting lets you enable or disable the sound coming from the Smart Lock when you, unlock, lock, set passage mode etc. By default Lock Sound is enabled

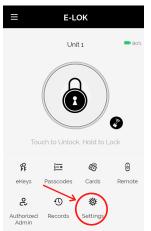

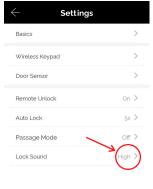


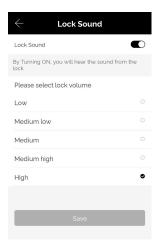

## **Extra Smart Lock Settings:**


#### Reset Button:

With E-LOK App, you can enable or disable the factory reset button inside the battery case. Disabling this reset button will prevent someone from resetting the E-LOK Smart Lock and locking you out (apart from mechanical key). This feature works great on E-LOK's installed on Airbnb's, rentals etc.

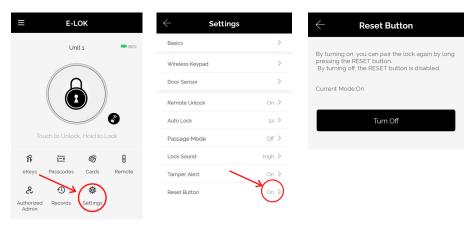

#### Import from another E-LOK Smart Lock:


Import from another app feature allows you to sync PIN-Codes and RFID Cards between E-LOK Smart locks. If you have more than one E-LOK Smart Lock use this feature to have your PIN Code and RFID Card to work on each, without setting them up again. This feature is in the lock settings.

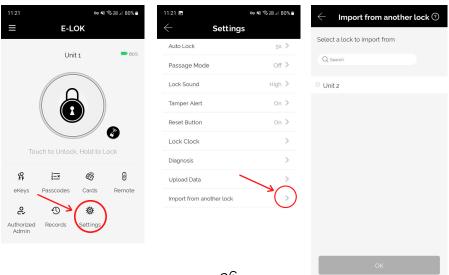


## **Transfer Lockset Ownership:**


Transferring Lockset ownership can be useful in a few scenarios. What it allows you to do is give Master Admin ownership to another E-LOK App account holder. The process to Transfer Lockset Ownership is shown below:

Tap into "Settings" then into "Transfer Lock(s)". Here you can select the Smart Lock you wish to transfer ownership. You will then be required to input the receiving account's email or phone number (whichever the E-LOK App account was created with). The Smart Lock ownership will be transferred to that account.

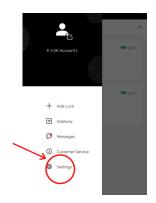

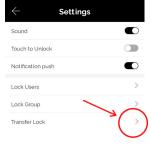



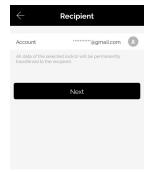

### NOTE:

Transferring Lockset Ownership retains any and all PIN Codes, RFID Cards and settings previously programmed to that specific E-LOK Smart Lock.

## **Using E-LOK 10-Series Smart Lock**



Your F-LOK 10-Series Smart Lock has two handle functions:

Lift up the handle to engage the mortice deadbolt.
Pull down to unlock and release latch + deadbolt

Important Notes: When the E-LOK 10-Series automatically locks, the handle disengages from the latch, but you can still lift the handle to engage the mortice bolt. Engaging the deadbolt when the E-LOK is not electronically locked (aka in passage mode), the E-LOK will not be locked, and you could then pull down on the handle to unlock it even with the deadbolt engaged. So, the door is not locked until the handle is mechanically disengaged. With Auto Lock on, it will mechanically lock it automatically. To throw the deadbolt, this has to be done Manually by lifting the lever up.


**Using your Pin Code:** enter your pin code followed by **"#"** to unlock your E-LOK.

## **Unlocking E-LOK 10-Series with Key**

Your E-LOK comes with two mechanical keys and a slot in the front panel to use them. If you've forgotten your PIN Code or your E-LOK 10-Series batteries are flat, follow these steps to unlock it mechanically.

Insert Mechanical Key into slot at the bottom of the E-LOK Turn key 90 degrees

Pull the handle down as it is now engaged with the latch. If batteries are flat, replace them.

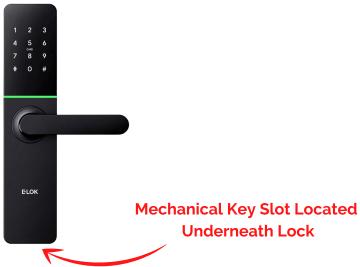

Shown on the right is the location of the mechanical key slot.

The USB-C port beside it can be used to power up the Smart Lock if the batteries run flat. When connected to a power bank or battery source, the Smart Lock can be powered up and then a PIN Code, RFID Card or the app can be used to unlock it.



## E-LOK Gateway (only if you've purchased the E-LOK Gateway Add-On)

E-LOK Gateway allows you to transfer information and commands to your 10-Series E-LOK via Wi-Fi. It also allows you to change settings, unlock the 10-Series and receive live notifications when it is unlocked and which passcode was used.

Please note: only the **Master Admin** can set-up an E-LOK Gateway for a Smart Lock.

E-LOK Gateway should be plugged in via the included USB-C cable.

#### It must be:


- Near a Wi-Fi router
- Near the E-LOK 10-Series

(Around 5-10 meters from each or as close as possible).

If the E-LOK Gateway is not near one or both, connection may be poor and the E-LOK Gateway may not function as expected.

### To add the E-LOK Gateway to the E-LOK App follows these steps:

Open the left menu on the E-LOK App. Tap "Gateway". Tap "+" Sign. Select "G2"

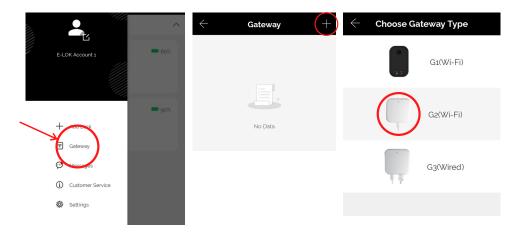


## E-LOK Gateway (only if you've purchased the E-LOK Gateway Add-On)

Plug in E-LOK Gateway. Light should flash red and blue - this means it's ready to connect.

Tap "Next" then Tap "G2"

Configure your network (2.4GHz only), input Wi-Fi password and name the E-LOK Gateway.

This will have your E-LOK Gateway set-up on your home network and linked into the app and your 10-Series Lock.

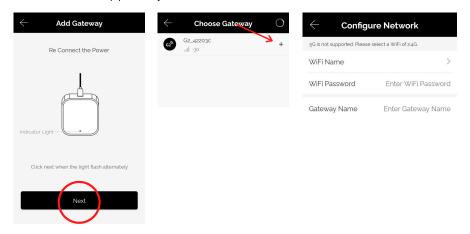


The E-LOK Gateway will now scan for an E-LOK 10-Series to connect to. You can have multiple E-LOK's connected to one E-LOK Gateway. To see what locks are near your gateway, go to Gateway, Tap the connected Gateway of your choice, Tap Nearby Locks.



## E-LOK Gateway (only if you've purchased the E-LOK Gateway Add-On)

Last step is to ensure the Unlock Remotely feature is enable on your 10-Series. Open your lock management, tap into "Settings", locate the "Unlock Remotely" menu and ensure this is enabled.

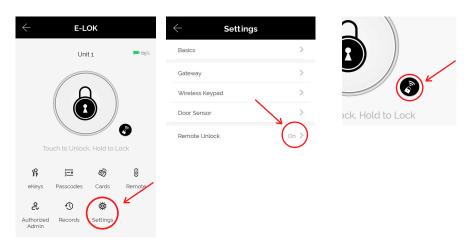


You will now be able to control your E-LOK 10-Series from the app remotely via Wi-Fi, whether you're at work or out-of-town. You can add, change or delete unlock codes. The remote unlock feature will now be available. You can also receive live notifications for when your E-LOK 10-Series was unlocked, and which code was used to unlock it.

If the E-LOK Gateway refuses to connect or displays error messages; disconnect it from the power source for at least 15 minutes. Then retry setting it up,

## **E-LOK Gateway Specs + other info**


#### **Reset E-LOK Gateway:**

If you require to factory reset of your E-LOK Gateway follow the below process. Removing the Gateway from your app will unlink the Smart Locks that are connected to it. The Smart Locks will work as usual via Bluetooth.

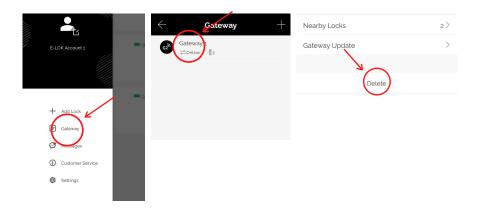

#### **Transfer Gateway:**

Similar to transferring Lockset ownership, you can transfer the ownership of Gateway's setup on your account. Steps below show process. Once transferred, you will no longer have access to that Gateway.

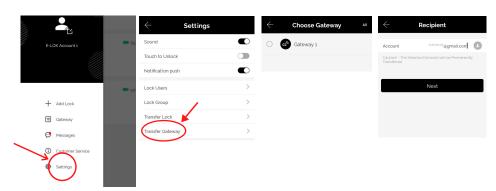

#### **Additional Gateway Specs:**

Network: 2.4 GHz IEEE Standard: 802.11b/g/n Power Interface: Type-C USB Power Input: DC5V/500mA

## **Maintenance Guide:**

Maintenance should be carried out on your E-LOK 10-Series every 6 months.

Use the below guide to ensure your E-LOK Smart Lock lasts the test of time:

### **Every 6 months:**

- Check that the screws fixing the mortice lock are tight. Check that the screws fixing the rear panel to the front panel are tight.
- Check if batteries need replacing. If battery percentage is low replace with four fresh Alkaline 1..5V AA batteries. When replacing the Battery's They are located on the inside, under the plastic cover. Slide the plastic cover upwards to reveal batteries.





- Wipe the surface of the E-LOK 10-Series Smart Lock with a cloth dampened with <u>only</u> water. This will help remove any dust or micro contaminants from the surface.
- If the handle feels loose or wriggles from the Smart Lock, you may
  have to remove the Smart Lock from the door and re-tighten the
  inner screw with Loctite securing the handle to either or both the
  front and rear panel.
- It is also a good idea to do a full Manual Factory Reset of the E-LOK 10-Series Smart Lock to ensure software stays light and un-bloated.

## **Important Notes:**

Please Note:

You must use the E-LOK App to set-up your E-LOK 10-Series Smart Lock. When you first power up your E-LOK, the Smart Lock will have very limited features until you have completed the short set-up process and added at least one unlock code. You can find a link to the app on E-LOK.com

The E-LOK App allows you to manage an unlimited amount of E-LOK 10-Series Smart Locks from your phone. Remember to name each E-LOK 10-Series Smart Lock uniquely to ensure you don't mix them up.

The E-LOK Gateway can connect to multiple E-LOK 10-Series Smart Locks. An instance where you'd need multiple E-LOK Gateway's is if one E-LOK 10-Series Smart Lock is on a different site or only in range of a different Wi-Fi network.

The E-LOK App allows you to manage multiple E-LOK Gateways with their individually connected E-LOK 10-Series Smart Locks. This means you can have an E-LOK Gateway at home connected to your E-LOK 10-Series Smart Lock plus one at work and manage them individually.

E-LOK App works with E-LOK 5,6,7, 8, 9 & 10-Series Smart locks. You can have all Series linked to your app at the same time.

## **Contact:**

If you run into trouble with your E-LOK 10-Series Smart lock please visit: E-LOK.com for further information, help and tools. If you don't find your answer on E-LOK.com use the contact box and send us an email.

You can also email us direct, by going into the Customer Service menu on the E-LOK App.

# **E-LOK**

# 10-Series

## **User Manual**

Scan to download the E-LOK App









E-LOK.com

Version: 2505 E10UM